

Part # 6029

R-134a Can Tap

Brass dispensing valve for R-134a charging hose

Valve has 1/2" ACME RH thread with depressing actuator

For use with R-134a self-sealing valve refrigerant cans

Instructions:

1. Read the instructions completely before using.
2. Prior to attaching the R-134a can tap on the R-134a can, turn the handle clockwise until the actuator stem is above the can tap seal.
3. Thread the R-134a can tap on the R-134a can fitting.
4. Attach the R-134a charging hose from the manifold gauge set.
5. (CAUTION) Always add refrigerant to low side of A/C system.
6. Turn the handle on the R-134a can tap counterclockwise until the actuator stem opens the internal self-sealing valve.
7. Refrigerant is now entering the A/C system.
8. Turn R-134a can tap handle clockwise until it stops to close the internal self-sealing valve. Remove the R-134a can tap from the R-134a can.

**ALWAYS WEAR PROTECTIVE EYEWEAR AND RUBBER GLOVES
WHEN SERVICING ANY A/C SYSTEM**