



Air Conditioning Products
Tools, Equipment & Refrigerant

Part # 6840 R-1234yf Can Tap

Instructions



- Brass dispensing valve for R-1234yf refrigerant cans with 1/2" ACME LH fitting
- Hose connection is 1/2" ACME LH thread designed for R-1234yf yellow charging hose (note the letters LH etched on the tap)

Instructions:

1. Read the instructions completely before using.
2. Prior to attaching the R-1234yf can tap on the R-1234yf can, turn the handle clockwise until the actuator stem is above the can tap seal.
3. Thread the R-1234yf can tap on the R-1234yf can.
4. Attach the yellow R-1234yf charging hose from the manifold gauge set.
5. (CAUTION) Always add refrigerant to low side of A/C System.
6. Turn the handle of the R-1234yf can tap counterclockwise until the actuator opens the internal self-sealing valve.
7. Refrigerant is now entering the A/C system.
8. Turn R-1234yf can tap handle clockwise until it stops to close the internal self-sealing valve. Remove the R-1234yf can tap from the R-1234yf can.

ALWAYS WEAR PROTECTIVE EYEWEAR AND RUBBER GLOVES WHEN SERVICING ANY A/C SYSTEM