R1234YF Aluminum Manifold Gauge Set

Part # 6850

- Service R1234YF systems
- 72" Charging Hoses
- Manual Couplers



FJC R1234YF Oil



- For use with R1234yf Refrigerant
- PAG 46 Viscosity

R1234YF

Part # 698

R1234YF 25 lb. cylinder

R1234YF

Part # 697

R1234YF 10 lb. cylinder

Next Generation of Mobile Refrigerant

- Do not mix with R134a
- Requires R1234YF lubricant



See FJC catalog for these R1234yf products.



R1234yf Hand Turn Oil & Dye Injector 2 oz Part # 2724

Instructions



704-664-3587 www.fjcinc.com



R1234yf 2 ounce Oil and Dye Injector

Part # 2724

WARNING: ALWAYS USE EYE PROTECTION WHEN OPERATING THIS TOOL.

Operating Instructions:

For R1234yf Systems:

- 1. Remove cap with hose.
- 2. Unscrew handle of injector counterclockwise until inside edge of handle lines up with line below 20z/60ml mark.
- 3. Fill injector with FJC Universal A/C Dye or FJC 1234yf PAG Oil to bottom of threads inside injector.
- 4. Screw cap with hose into dye injector. Do Not Over Tighten. Twist the injector to purge the line of air.
- Connect R1234yf quick coupler to LOW SIDE SERVICE PORT of vehicle.

WARNING: ONLY CONNECT INJECTOR TO LOW SIDE SERVICE PORT. CONNECTING INJECTOR TO HIGH SIDE SERVICE PORT MAY CAUSE PERSONAL INJURY.

To Inject Oil:

- A. Screw handle of injector, clockwise, until handle stops. Do Not Over Tighten. This injects 2 ounces of oil.
- B. Disconnect R1234yf quick coupler from low side service port.

To Inject Dye:

- A. Screw handle of injector, clockwise, until inside edge of handle lines up with line under 1 ¾ oz / 52.5ml on injector. This injects ¼ ounce / 7.5ml of dye.
- B. Disconnect R1234yf quick coupler from low side service port.
- C. To inject dye into next vehicle, screw handle of injector, clockwise, until inside edge of handle lines up with next line on injector to inject ¼ ounce / 7.5ml of dye into A/C system.