

Air Conditioning Products Tools, Equipment & Refrigerant

# FJC # 43610 RADIATOR COOLANT VACUUM REFILL KIT



**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NO LIABILITY IS ACCEPTED FOR INCORRECT USE OF THIS PRODUCT. WARNING:

- DO NOT REMOVE RADIATOR CAP WHEN COOLING SYSTEM IS HOT
- ALWAYS USE GOGGLES, PROTECTIVE GLOVES AND CLOTHING

### **\* ILLUSTRATION**



#### **\* PRODUCT PARTS**






| Description |                                   |
|-------------|-----------------------------------|
| VA. 1       | Gauge                             |
| VA. 2       | Hook                              |
| VA. 3       | Air Switch                        |
| VA. 4       | Air Supply                        |
| VA. 5       | On/Off Button                     |
| VA. 6       | Thin Hose Connection              |
| VA. 7       | Coolant Switch                    |
| VA. 8       | Coolant Hose Connection           |
| VA. 9       | Radiator Test Cap Connection      |
| VA. 10      | Universal Rubber Radiator Adapter |
| VA. 11      | Thin Hose                         |
| VA. 12      | Coolant Hose                      |

## ✤ INSTRUCTIONS

#### **Purge Cooling System**

- **Step 1:** Drain coolant from radiator as well as possible.
- **Step 2:** Remove the purge and refill tool from the test kit and hang the tool in a convenient location under the hood with the hook provided.
- Step 3: Choose the correct radiator cap for the vehicle being tested, or the universal rubber radiator adapter from the test kit and install the one of your choice on the cooling system opening. Fasten the quick coupler at the end of the hose on the purge and refill tool to the radiator cap securely. (See fig. 4 & 5)
- Step 4: Turn valve No. 3 to the open position and valve No. 6 to the closed position. (See fig. 6)
- Step 5: Connect air supply to the purge and refill tool and press operating button until the pressure reaches 20-25 Hg (50-60cmHg). Turn valve No. 3 to the closed position and release the operating button. (See fig. 7 & 8)

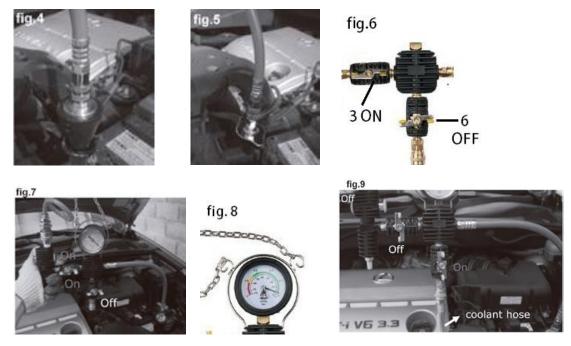

#### **Refill Cooling System**

- Step 1: Connect the coolant hose to the purge and refill tool and submerge in coolant.
- **Step 2:** Assure that valve No. 3 is in the closed position and that there is coolant in the coolant hose.
- Step 3: Turn valve No. 6 to the open position to allow the coolant to refill the cooling system.
- **Step 4:** The refill is complete when the gauge reads 0.

#### Note: Please check the coolant level and add coolant as necessary to the proper level.

# **FJC**

101 Commercial Drive Mooresville, NC 28115 www.fjcinc.com